

Compatibilidades: DeskJet 460; DeskJet 460c; DeskJet 460cb; DeskJet 460wbt; Deskjet 460wf; DeskJet 5700 series; DeskJet 5740; Deskjet 5740xi; DeskJet 5743; DeskJet 5745; DeskJet 5748; DeskJet 5940; DeskJet 5943; DeskJet 6520; Deskjet 6520xi; DeskJet 6540; Deskjet 6540d; Deskjet 6540dt; Deskjet 6540xi; DeskJet 6543; DeskJet 6545; DeskJet 6548; DeskJet 6620; Deskjet 6620xi; DeskJet 6623; DeskJet 6628; DeskJet 6800; DeskJet 6830; DeskJet 6840; Deskjet 6840dt; Deskjet 6840xi; DeskJet 6843; Deskjet 6848; DeskJet 6940; DeskJet 6943; DeskJet 6980; DeskJet 6983; DeskJet 9800; Deskjet 9800d; DeskJet 9868; DeskJet D4160; DeskJet D4163; OfficeJet 100 Mobildrucker L411A; OfficeJet 150 Mobile; OfficeJet 6200; OfficeJet 6203; OfficeJet 6205; OfficeJet 6210; OfficeJet 6210v; OfficeJet 6210xi; OfficeJet 6215; OfficeJet 6300; OfficeJet 6304; OfficeJet 6307; OfficeJet 6308; OfficeJet 6310; OfficeJet 6313; OfficeJet 6315; OfficeJet 6318; OfficeJet 7200; OfficeJet 7205; OfficeJet 7208; OfficeJet 7210; OfficeJet 7210v; OfficeJet 7210xi; OfficeJet 7213; OfficeJet 7215; OfficeJet 7218; OfficeJet 7300; OfficeJet 7310; OfficeJet 7310xi; OfficeJet 7313; OfficeJet 7408; OfficeJet 7410; OfficeJet 7410xi; OfficeJet 7413; OfficeJet H470; OfficeJet H470b; OfficeJet H470wbt; OfficeJet K7100; OfficeJet K7103; OfficeJet K7108; PhotoSmart 2570; PhotoSmart 2571; PhotoSmart 2573; PhotoSmart 2575; PhotoSmart 2577; PhotoSmart 2578; PhotoSmart 2600; PhotoSmart 2605; PhotoSmart 2608; PhotoSmart 2610; PhotoSmart 2610v; PhotoSmart 2610xi; PhotoSmart 2613; PhotoSmart 2615; PhotoSmart 2710; PhotoSmart 2710xi; PhotoSmart 2713; PhotoSmart 325; PhotoSmart 329; PhotoSmart 335; PhotoSmart 337; PhotoSmart 338; PhotoSmart 375; PhotoSmart 380; PhotoSmart 385; PhotoSmart 420; PhotoSmart 422; PhotoSmart 425; PhotoSmart 428; PhotoSmart 470; PhotoSmart 475; PhotoSmart 7800; PhotoSmart 7830; PhotoSmart 7838; PhotoSmart 7850; PhotoSmart 7850v; PhotoSmart 7850xi; PhotoSmart 8000; PhotoSmart 8030; PhotoSmart 8038; PhotoSmart 8049; PhotoSmart 8050; PhotoSmart 8053; PhotoSmart 8150; PhotoSmart 8150v; PhotoSmart 8150xi; PhotoSmart 8153; PhotoSmart 8157; PhotoSmart 8450; PhotoSmart 8450gp; PhotoSmart 8450v; PhotoSmart 8450xi; PhotoSmart 8453; PhotoSmart 8543; PhotoSmart 8750; PhotoSmart 8750g; PhotoSmart 8750gp; PhotoSmart 8753; PhotoSmart 8758; PhotoSmart C3100 series; PhotoSmart C3125; PhotoSmart C3135; PhotoSmart C3140; PhotoSmart C3150; PhotoSmart C3170; PhotoSmart C3175; PhotoSmart C3180; PhotoSmart C3183; PhotoSmart C3190; PhotoSmart C3194; PhotoSmart C4100 series; PhotoSmart C4110; PhotoSmart C4140; PhotoSmart C4150; PhotoSmart C4170; PhotoSmart C4173; PhotoSmart C4180; PhotoSmart C4183; PhotoSmart C4190; PhotoSmart C4193; PhotoSmart C4194; PhotoSmart D5060; PhotoSmart D5065; PhotoSmart D5069; PhotoSmart D5100 series; PhotoSmart D5145; PhotoSmart D5155; PhotoSmart D5160; PhotoSmart Pro B8330; PhotoSmart Pro B8350; Psc 1510; Psc 1513; Psc 1545; Psc 1600; Psc 1603; Psc 1605; Psc 1610; Psc 1610v; Psc 1610xi; Psc 1613; Psc 1615; Psc 2300; Psc 2350; Psc 2352; Psc 2353; Psc 2355; Psc 2355P; Psc 2355v; Psc 2355xi; Psc 2357; Psc 2358; Psc 2610; Psc 3180; Psc 4180.