

Compatibilidades: DeskJet 460 series; DeskJet 5700 series; DeskJet 5740; DeskJet 5743; DeskJet 5745; DeskJet 5748; DeskJet 5940; DeskJet 5943; DeskJet 6520 /xi; DeskJet 6540 /dt /xi/d; DeskJet 6543; DeskJet 6545; DeskJet 6548; DeskJet 6620; DeskJet 6623; DeskJet 6628; DeskJet 6800; DeskJet 6830; DeskJet 6840; DeskJet 6843; DeskJet 6940; DeskJet 6943; DeskJet 6980; DeskJet 6983; DeskJet 9800/d; DeskJet 9868; DeskJet D4160; DeskJet D4163; OfficeJet 6200; OfficeJet 6203; OfficeJet 6205; OfficeJet 6210; OfficeJet 6215; OfficeJet 7205; OfficeJet 7208; OfficeJet 7210; OfficeJet 7213; OfficeJet 7215; OfficeJet 7310; OfficeJet 7313; OfficeJet 7408; OfficeJet 7410; OfficeJet 7413; OfficeJet H470; OfficeJet K7100; OfficeJet K7103; OfficeJet K7108; PhotoSmart 2570; PhotoSmart 2571; PhotoSmart 2573; PhotoSmart 2575; PhotoSmart 2577; PhotoSmart 2578; PhotoSmart 2605; PhotoSmart 2608; PhotoSmart 2610; PhotoSmart 2613; PhotoSmart 2710; PhotoSmart 2713; PhotoSmart 325; PhotoSmart 329; PhotoSmart 335; PhotoSmart 337; PhotoSmart 375; PhotoSmart 385; PhotoSmart 420; PhotoSmart 422; PhotoSmart 425; PhotoSmart 428; PhotoSmart 475; PhotoSmart 8030; PhotoSmart 8038; PhotoSmart 8049; PhotoSmart 8050; PhotoSmart 8053; PhotoSmart 8150; PhotoSmart 8157; PhotoSmart 8450; PhotoSmart 8750; PhotoSmart 8750gp; PhotoSmart 8753; PhotoSmart 8758; PhotoSmart D5060; PhotoSmart D5065; PhotoSmart D5069; PhotoSmart D5100 series; PhotoSmart D5145; PhotoSmart D5155; PhotoSmart D5160; PhotoSmart Pro B8330; PhotoSmart Pro B8350; PhotoSmart Pro B8353; Psc 1600; Psc 1603; Psc 1605; Psc 1610; Psc 1613; Psc 1615; Psc 2300; Psc 2350; Psc 2352; Psc 2353; Psc 2355; Psc 2355P; Psc 2357; Psc 2358; Psc 2610.