

Compatibilidades: Deskjet 450; DeskJet 450cbi; DeskJet 450ci; Deskjet 450wbt; DeskJet 5145; DeskJet 5150; DeskJet 5151; DeskJet 5160; DeskJet 5168; DeskJet 5500; DeskJet 5550; DeskJet 5552; DeskJet 5600 series; DeskJet 5650; DeskJet 5652; DeskJet 5655; Deskjet 5662; DeskJet 5850; DeskJet 9600; Deskjet 9650; DeskJet 9670; DeskJet 9680; Digital Copier 410; OfficeJet 1110; OfficeJet 4105; OfficeJet 4110; OfficeJet 4115; OfficeJet 4200; OfficeJet 4210; OfficeJet 4211; OfficeJet 4212; OfficeJet 4215; OfficeJet 4219; OfficeJet 4251; OfficeJet 4252; OfficeJet 4255; OfficeJet 4256; OfficeJet 4259; OfficeJet 5500; OfficeJet 5505; OfficeJet 5508; OfficeJet 5510; OfficeJet 5515; OfficeJet 5600; OfficeJet 5605; OfficeJet 5610; OfficeJet 5615; OfficeJet 6100; OfficeJet 6110; OfficeJet 6150; OfficeJet J5500 series; OfficeJet J5508; OfficeJet J5520; PhotoSmart 130; PhotoSmart 2400 series; PhotoSmart 2405; PhotoSmart 2450; PhotoSmart 7000 serie; PhotoSmart 7150; PhotoSmart 7155; PhotoSmart 7155w; PhotoSmart 7260; PhotoSmart 7268; PhotoSmart 7345; PhotoSmart 7350; PhotoSmart 7445; PhotoSmart 7450; PhotoSmart 7458; PhotoSmart 7459; PhotoSmart 7530; PhotoSmart 7550; PhotoSmart 7655; PhotoSmart 7660; PhotoSmart 7700; PhotoSmart 7755; PhotoSmart 7760; PhotoSmart 7762; PhotoSmart 7765; PhotoSmart 7960; Psc 1100; Psc 1110; Psc 1200; Psc 1205; Psc 1210; Psc 1210v; Psc 1210xi; Psc 1213; Psc 1215; Psc 1217; Psc 1219; PSC 1250; Psc 1300; Psc 1310; Psc 1311; Psc 1312; Psc 1315; Psc 1317; Psc 1340; Psc 1345; Psc 1350; Psc 1355; Psc 1915; Psc 2000; Psc 2100; Psc 2105; Psc 2108; Psc 2110; Psc 2110v; Psc 2110xi; Psc 2115; Psc 2150; Psc 2170 series; Psc 2171; Psc 2175; Psc 2179; Psc 2200; Psc 2210; Psc 2210V; Psc 2210XI; Psc 2212; Psc 2310; Psc 2400; Psc 2405; Psc 2410; Psc 2420; PSC 2425; Psc 2500; Psc 2510; Psc 2550; PSC 2570; PSC 2575.